



Assembly instructions for leaf guards

We supply leaf guards with splayed legs that can be opened to widths from 100mm to 130mm and from 130mm to 190mm. Thanks to the screw connections, the leaf guards are easy to loosen, clean and close. It takes just two steps for the leaf guard to be firmly attached

to the discharge pipe. In the first step, the guards are inserted into the pipe with the legs closed. An Allen key is then used to open the legs by tightening a socket screw.

Please note: Leaf guards should be inspected at least twice a year – in the

spring and autumn. Additional checks may be needed due to external influences such as neighbouring trees, pollen drift, storms, etc.

Please get in touch if you have any queries:
+49 (0)52 07 / 95 04-0

